
Mounting Instructions for Kimberly-Clark^{*} Professional Skin Care Dispenser

IMPORTANT! For secure mounting, follow instructions thoroughly.

NOTE: Ensure that dispenser is mounted so that bottom edge of dispenser is a minimum of 10" above any surface, e.g. counter, back splash, etc.


OPENING DISPENSER

- Dispenser cover may be opened by inserting key in slots on top of cover and depressing latch (Figure 1) or using optional push button.
- 2. If push button operation is desired, remove push button from back of housing and install prior to installation of dispenser. See Instructions for Optional Pushbutton Lock Feature.

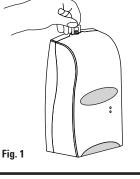

OPTIONAL PUSHBUTTON LOCK FEATURE

- To install pushbutton remove decorative hole plug if one is installed by raising the lock spring (do not over-bend spring) and pushing out with a small screwdriver.
- 2. Remove pushbutton from back of dispenser.
- 3. Raise end of lock spring. Do not over-bend spring. See Figure 2
- 4. Slide pushbutton under lock spring. Insert button through hole in door. See Figure 3

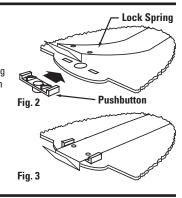

Dispenser screw

Universal mounting

bracket mounting holes

mounting holes

SCREW MOUNTING DISPENSER

For porous, textured, or wallpapered surfaces, screw mounting is recommended . Ensure that mounting hardware is appropriate for your wall surface.

3. To mount dispenser by screw mounting

appropriate holes on template.

universal mounting bracket mark and drill

must be a minimum of 13 1/2" above any

surface, e.g. counter top, back splash, etc.

NOTE: Bottom of universal mounting bracket

- The dispenser may be mounted using a minimum of four # 8 x ¾" self-tapping screws and wall anchors. Ensure that proper mounting hardware is used for your wall composition.
- Use the dispenser mounting template (Figure 1) provided to mark and drill holes. NOTE: Bottom of dispenser must be a minimum of 10" above any surface, e.g. counter top, back splash, etc.

TAPE MOUNTING DISPENSER

Tape mounting is possible using enclosed tape pads or universal mounting bracket 91070 (provided separately)

Using Tape Pads:

- 1. Wipe back of dispenser thoroughly with a clean dry cloth.
- Remove backing paper from one side of small tape pad. Carefully align pad on top section of dispenser as shown in Figure 1.
 Do not cover latch opening. Press tape pad firmly against dispenser.
- 3. Remove backing paper from one side of large tape pad. Carefully align pad on bottom section of dispenser as shown in **Figure 1**. Press tape pad firmly against dispenser.
- Clean mounting surface on tile, mirror, etc. thoroughly using isopropyl alcohol and a clean cloth. Allow surface to dry completely.

Using Universal Mounting Bracket:


NOTE: Mounting bracket recess is offset from center of dispenser. Ensure to mount bracket so that center of dispenser is in desired position.


- Clean mounting surface on tile, mirror, etc. thoroughly using isopropyl alcohol and a clean cloth. Allow surface to dry completely.
- 2. Use template to locate and mark mounting bracket position.

Installing Dispenser on Universal Mounting Bracket:

Fig. 1

 - 1. Align mounting bracket in top of recess in dispenser. **See Figure 1**
- 2. Push dispenser up firmly. See Figure 2
- 3. Open dispenser and ensure snap is fully engaged with top of mounting bracket. See Figure 3
- minimum of 13.5" above any surface, e.g. counter top, back splash, etc.
 3. Remove backing paper from mounting bracket tape.
- 4. Carefully align mounting bracket with marked location, ensuring it is level. Firmly press and hold mounting bracket against surface.
- Allow mounting bracket to remain empty for a minimum of 24 hours before installing dispenser.

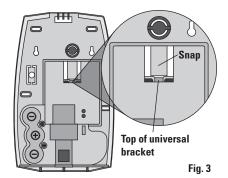




- Align bottom edge of dispenser with line and press against mounting surface. Open dispenser and press firmly against mounting surface.
- 7. Allow dispenser to remain empty for 24 hours before installing soap refill.

Ensure that bottom of mounting bracket is a

Fig. 2

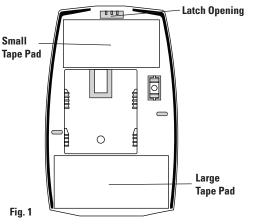


δ

Center of

dispenser

Fig. 1

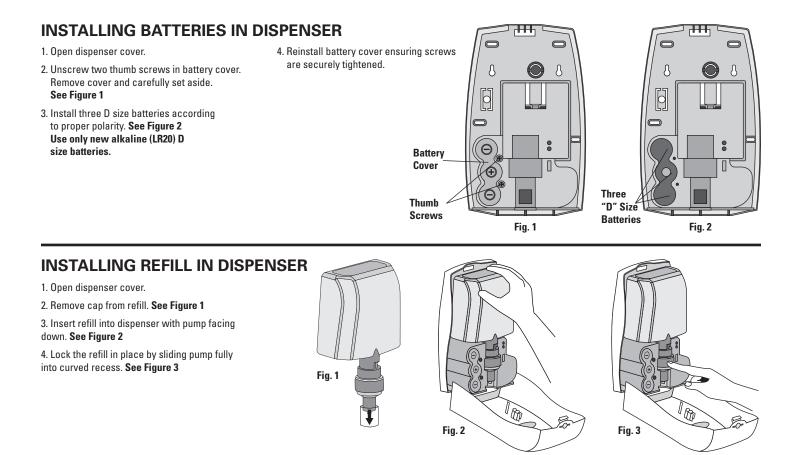

LOW BATTERY AND LOW PRODUCT INDICATORS

- 1. Low Battery Indicator. See Figure 1
- Flashes red when batteries should be changed. See Figure 3 2. Low Product Indicator. See Figure 2

Flashes yellow when product level is low. See Figure 3

