


Electronic Dispenser Module Loading and Operating Instructions

## LOADING INSTRUCTIONS

 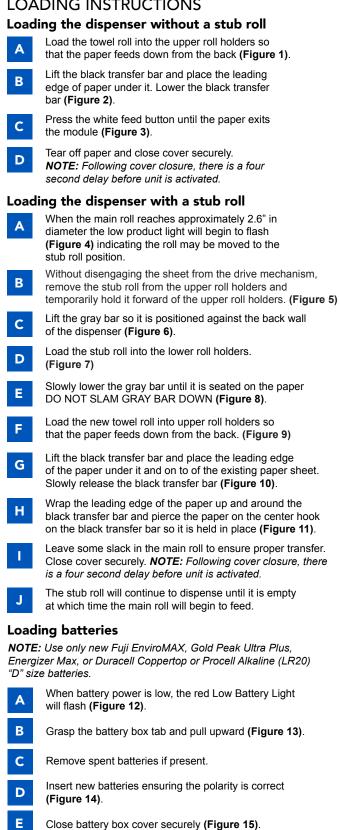


AC ADAPTOR NOTE: For AC Power only use adaptor #51224

SEE OTHER SIDE FOR OPERATING INSTRUCTIONS










888

   0



















10

     
12

 












Form 034140 5/2020



Electronic Dispenser Module Loading and Operating Instructions

# **OPERATION AND FEATURES (FIGURE 16)**

#### A. Adjusting the Activation Sensitivity 送

To adjust the activation sensitivity set the switch to the upper (low sensitivity) or lower (high sensitivity) position. **Do not set the switch in the middle position as the unit will turn off.** 

**NOTE:** For installations over counters, trash receptacles, etc., the activation sensitivity must be set on the low setting.

#### B. Adjusting the Sheet Length

To set the length of the sheet that is dispensed, set the slide switch to the top (8"), middle (10") or lower (12")position.

#### C. Setting the Operating Mode

The dispenser is designed to function in either the "Hidden" or "Hanging" mode. To select the hidden mode slide the switch to the icon (upper) position. To select the hanging mode slide the switch to the icon (lower) position.

#### **D. Indicator Lights**

The **Low Battery** Imdicator light will begin to blink red when the battery life is getting low and the batteries should be changed soon. The light will glow red constantly when the batteries have reached the end of their useful life (Dead Batteries ) and should be changed immediately.

The **Low Product**  $\bigcup_{i=1}^{i}$  indicator light will blink yellow when the product roll can be moved to the stub roll position.

**Jam Alert**  $\mathcal{O}$  In the unlikely event of a paper jam the low battery and low product lights will flash red and yellow alternately. While it may be possible to clear a jam from outside, the dispenser may need to be opened to clear the jam.

### E. Important Sticker (Figure 17)

The stub roll loading procedure is new. Be sure to place the sticker on the inside of the dispenser to alert staff members.

### LENS INSTALLATION




Clean the area around the circular opening on the outside of the dispenser cover with an alcohol wipe (Figure 18).



С

Remove the red adhesive liner from the lens (Figure 19).

Press the lens onto the cover and maintain pressure for 10 seconds (Figure 20).

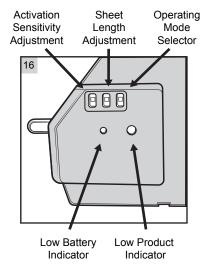

#### Figure 17



Form 034132 06/2019





