

**Engineered
Performance and Purity**



WETTASK® System
for Healthcare Disinfection



**0641
KIMTECH PREP* Wipers
now compatible
with quat
disinfectants**

KIMTECH *Prep**
Wipers


KIMTECH Prep*
Wipers

for the WETASK® Refillable
Wet Wiping System

The compact, self-contained wet wiping system that's safe, simple and reliable

The WETASK® Refillable Wet Wiping System is the ideal alternative to using a spray bottle or open bucket in combination with a rag. It combines all cleaning steps into one, making it easy to use and incredibly versatile.

06411
KIMTECH PREP* Wipers
now compatible
with quat
disinfectants

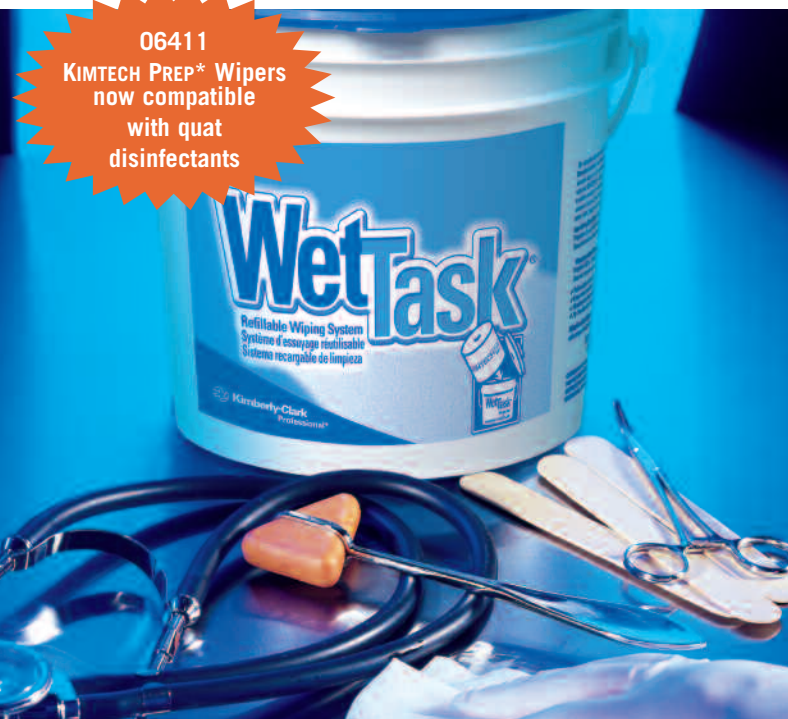

Three easy steps to use the WETASK® Refillable Wet Wiping System

Just choose the KIMTECH PREP* Wiper that works best for your task, then add the chemical solution you already use.

Optimum disinfection

- Choice of three base sheets designed for the chemical solutions that fit your specific cleaning task
- Uniform application of solution to surfaces

A recent research study demonstrates that 06211 KIMTECH PREP* Wipers for Disinfectants and Sanitizers would better maintain the target disinfectant concentration compared with cotton rags, even over a prolonged period of use

Safe

- Enclosed system helps avoid contamination of the wipers and cleaning solution when in use
- Reduces exposure to chemical vapors and splashes

Easy to use

- Versatility of adding your preferred disinfecting solution
- Ability to prepare buckets ahead of time
- Portability that makes it easy to spot-clean germ "hot zones" throughout the day without the hassles of a full cleaning cart

Efficient and cost effective

- Controlled chemical usage and related costs
- No laundering required
- Free disposable bucket in each case



Research study findings demonstrate that KIMTECH PREP* Wipers better maintain target disinfectant concentration

Objective

Measure the concentration of active quaternary amine disinfectants (quat) applied to surfaces using 3 different wiping materials.

Testing Parameters

- Leading brand of basic quat common in healthcare
- 3 wiping formats were tested:
 - Test 1:** Cotton rags in an open bucket
 - Test 2:** Cellulose-based wipers in an open bucket
 - Test 3:** 06211 KIMTECH PREP* Wipers in the WETTASK® Refillable Wet Wiping System
- Measure active quat release from the wipers as used

These study results were first published in the *Knowledge Connection: On the Surface*. To download a free copy that discusses this research study in further detail, visit us at www.kimtech.com/wettaskknowledge or call 888-346-GOKC (4652).

COTTON RAGS

47%

quat concentration
from first rag

CELLULOSE-BASED WIPERS

40%

quat concentration
from first wiper

06211 KIMTECH PREP* Wiper in the WETTASK® System

▶ 88%

or higher quat concentration
maintained during
prolonged use†

Conclusions

- Your choice of wiping materials can dramatically affect the amount of disinfectant agent that actually reaches the surfaces being cleaned.
- 06211 KIMTECH PREP* Wipers for Disinfectants & Sanitizers, specifically designed to be compatible with quaternary amine disinfectants, can maintain the concentration of actives released at near target levels even over a prolonged period of use.

† Testing period = 3 days

KIMTECH^{Prep}*
Wipers
for the WETASK® Refillable
Wet Wiping System







Each case of KIMTECH PREP* Wipers for the WETASK® System includes one FREE disposable bucket.

Use this chart to determine the product code that best suits your needs.







KIMTECH PREP* Wipers: Recommended use by cleaning task		DISPOSABLE SMALL BUCKET			09361 LARGE BUCKET
Cleaning Task	Chemical Type	06001	06211	06411	06006
General surface cleaning and degreasing	Detergents, water-based cleaners, solvents	■			■
Critical, low lint surface wiping	Solvents and solvent blends, dilute acids and bases			■	
Disinfecting / sanitizing	Bleach			■	
	Quaternary amine disinfectants†		■	■	

† Various quaternary amine disinfectants have differing shelf lives. For information regarding the proper use of KIMTECH PREP* Wipers for the WETASK® System contact kimtech@kcc.com

RECOMMENDED WIPERS FOR HEALTHCARE

Code	Description	Color	Material	Size W" X L"	Put-Up	Dispenser
06211	KIMTECH PREP* Wipers for Disinfectants and Sanitizers  Roll	○	Spunlace	12" x 12.5"	6/90	Small bucket free w/case 
06411	KIMTECH PREP* Wipers for Bleach, Disinfectants and Sanitizers  Roll	○	Meltblown	12" x 12.5"	6/90	Small bucket free w/case 

RECOMMENDED WIPERS FOR CLEAN MANUFACTURING

Code	Description	Color	Material	Size W" X L"	Put-Up	Dispenser
06001	KIMTECH PREP* Wipers for Solvents  Roll	○	HYDROKNIT®	12" x 12.5"	6/60	Small bucket free w/case 
06006	KIMTECH PREP* Wipers for Solvents  Roll	○	HYDROKNIT®	9" x 15"	2/275	Large bucket 09361 
06411	KIMTECH PREP* Wipers for Bleach, Disinfectants and Sanitizers  Roll	○	Meltblown	12" x 12.5"	6/90	Small bucket free w/case 

Get In Touch!

For more information on Kimberly-Clark Professional, visit us online at www.kcprofessional.com, contact your Kimberly-Clark Sales Representative, or call us at 1-888-346-GOKC (4652).

Our Guarantee: Your total satisfaction means everything to us. If, for any reason, our products do not meet your expectations, Kimberly-Clark will reimburse you† for your initial purchase, via FREE product, for up to \$1,000.

‡ Guarantee extended to consuming end-user accounts only.

